


## ★ Installation A: With an alarm

Illuminates when alarm is Armed. Turns off when Disarmed.

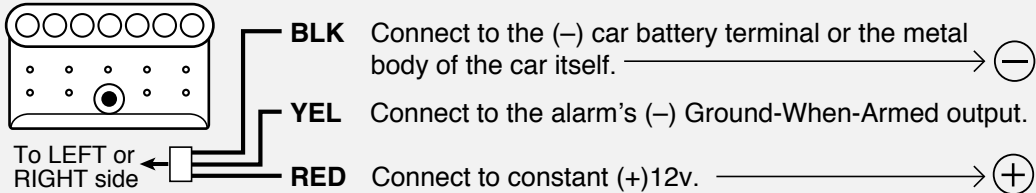


For addition help, please consult your alarm system's manual.

## ★ Installation B: Without an alarm

**INSTALL "B" REQUIRES PURCHASE OF THE OPTIONAL GAP-2**

If you install to IGN without the GAP-2, engine noise could damage the LED over time.

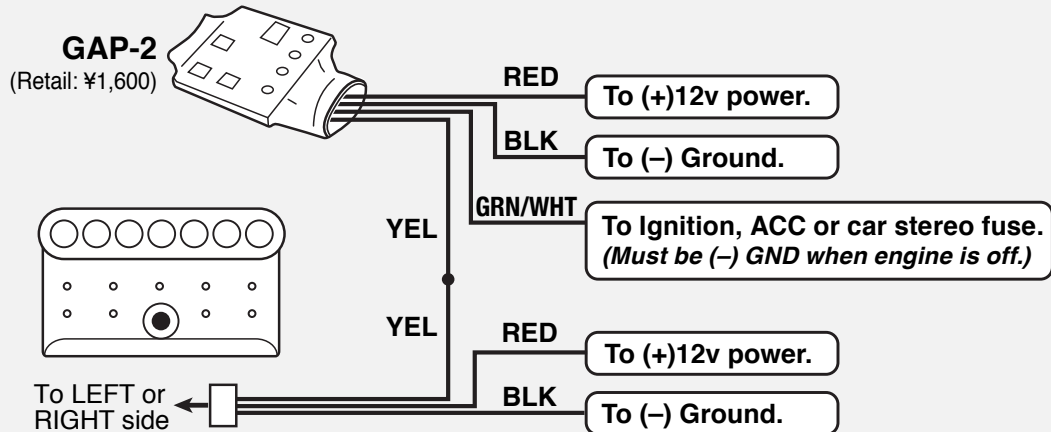

**NOTE: DO NOT** use the instructions in this box if you want the LM801 to work with an alarm!

### ⚠ WARNING!

To prevent a fire or malfunction due to a short, be sure to cover the unused connector with the included rubber cap.

### 16 Selectable Scanning Patterns

To change patterns, press product button while Ignition is ON.

### 3 Selectable Speeds

To change speeds, press product button while Ignition is OFF.

NOTE1: Pattern will change with each button press.

NOTE2: Flash memory saves your selection when power is cut.

### IMPORTANT!

DO NOT illuminate product while driving.

**CONSUMPTION** 10mA (avg.)